



Palstar products are designed by Hams for Hams carrying on the Palstar tradition for high-quality products designed and manufactured in Ohio, USA.

PM2000AM 2000W Wattmeter Technical Manual

Specifications Summary

- 300 W and 3000 W ranges
- 2000 W max power
- Frequency range: 1.8 to 60 MHz
- Weight: 1.3 Lbs
- 4.5" H x 4.5" W x 3.5" D

9676 N. Looney Rd,
Piqua, OH 45356 USA
(937) 773-6255
(800) 773-7931
(937) 773-8003 (Fax)
www.palstar.com




PM2000AM 2000W Wattmeter Technical Manual



Designed and Manufactured in the USA
Copyright 2018 Palstar, Inc.

PM2000AM SPECIFICATIONS

- **POWER RANGE:** 300 and 3000 Watts ranges
- **MAX POWER:** 2000 Watts
- **FREQUENCY RANGE:** 1.8 to 60 MHz
- **DIMENSIONS:** 4.5" W x 3.5" D x 4.5" H
- **WEIGHT:** 1.3 Lbs
- **CHASSIS:** Alodine-plated aluminium chassis

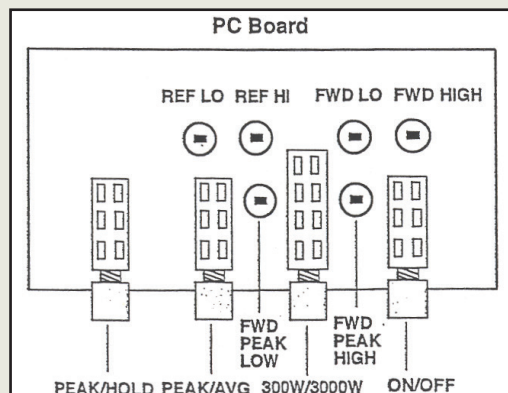

PM2000AM OPERATION

INSTALLATION

Install your PM2000AM mobile wattmeter before any antenna tuner. This will give you an accurate means to measure the SWR of the antenna system. If the antenna is cut for the right frequency and a tuner is not required, connect the PM2000AM as above.

An AC adapter is used to light the meter & power the peak reading circuitry, 12 Volts required at 40-50 ma. The power Jack requires a 2.1 mm plug center + (positive).

CALIBRATION (not required as shipped)

Using a calibrated source, adjust the meter calibration as follows: terminate the wattmeter in a known 50Ω dummy load through a calibrated wattmeter of known accuracy.

Pick a level on the 300 watt scale of the PM2000AM of 100 watts. If the level is either low or high compared to the calibrated wattmeter adjust the pot on the 300 watt scale as noted in the drawing below to match the readings. As single tone = peak, adjust for peak reading. Similarly on the high scale pick 500 watts to read on the calibrated wattmeter and adjust the forward 300 watt pot to read the same on your PM2000AM base wattmeter. Peak adjust as above for high power settings.

PEAK READING

The PM2000AM is capable of reading peak values in the SSB mode. Depressing the front panel button PEAK to read peak will activate the active circuitry and the meter will exhibit fast attack and a delay of about 1-1.5 secs. The peak value will be about 95-100% of peak SSB power. Depending on the voice characteristics this may be higher.

Single tone as it reads on the meter will read the same in peak mode as single tone power (average) equals single tone in peak mode. This is the way you check to see if the CW single tone power in the AVG position will be the same in the peak mode. There are 2 level controls that you can add if these readings are not the same in either the 300 watt or 3000 watt range. The PEAK/HOLD button if depressed will read PEAK in addition to holding at the peak value for 2 seconds approximately. NOTE: the PEAK/AVG must be depressed in order for HOLD to function.